

Classic Bespoke

How to request a quote

Request a quote by either:

- Emailing sales@proboxdrawers.co.uk
- Completing the simple to use form at www.proboxdrawers.co.uk
- Calling us to discuss your project on **01280 825776**

Please provide the following details:

- Drawer width or internal carcass width
- Drawer height and depth
- Timber type required
- Runner type and length (See pages 12-13)
- Any special features (e.g. handle cut-outs, shaped sides, unlacquered, traditional dovetails etc.)




We will acknowledge your order or enquiry and aim to send you a quote within the hour.

We work with you to achieve your delivery deadlines. Please contact us with your requirements.

Guide to calculating your drawer sizes

Width and height:

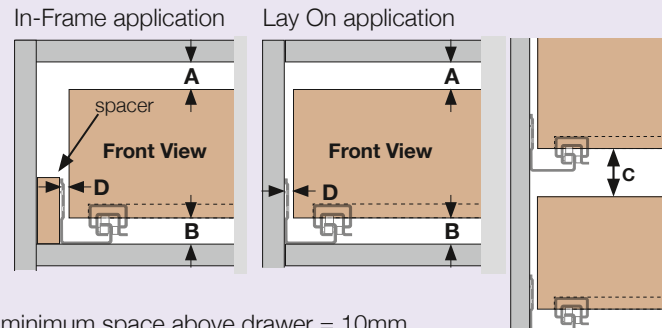

A: minimum space above drawer = 10mm

B: minimum space below drawer = 15mm


C: minimum space between drawers in a stack = 25mm

D: spacing between carcass and drawer side = 8mm for 13mm material
= 6mm for 15mm material



Note: spacers will be required when fitting runners in an In-Frame application.

Depth:

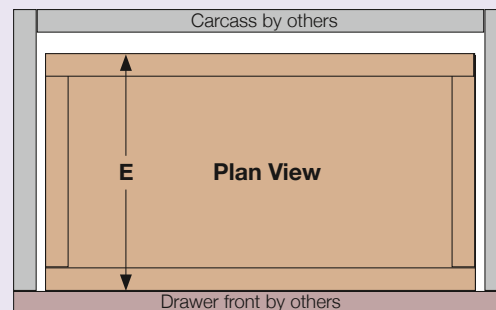

E: Drawer depth = runner length **less** 10mm.

If using the drawer as an internal drawer ie without a separate drawer front, then drawer depth = runner length **plus** 3mm for 13mm material.
5mm for 15mm material.